


CHANGE FROM ELIWELL TO CAREL


Eliwell Thermostat

To Carel Thermostat

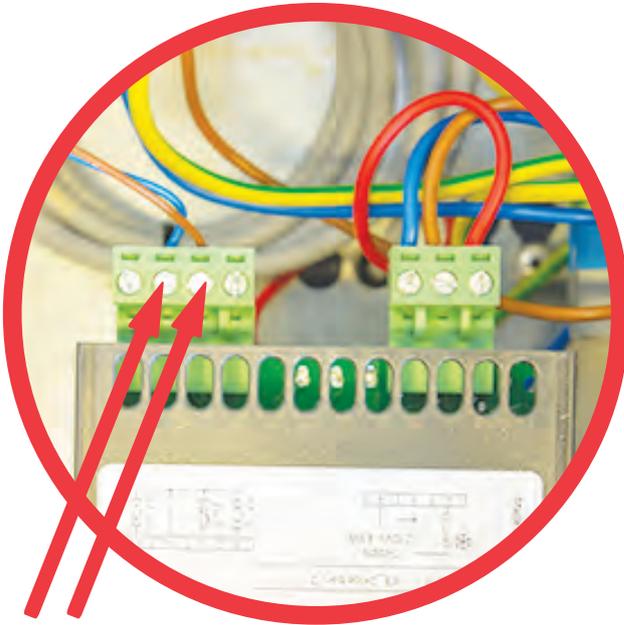

From here

Move the probe connector cables from the middle terminal connectors.

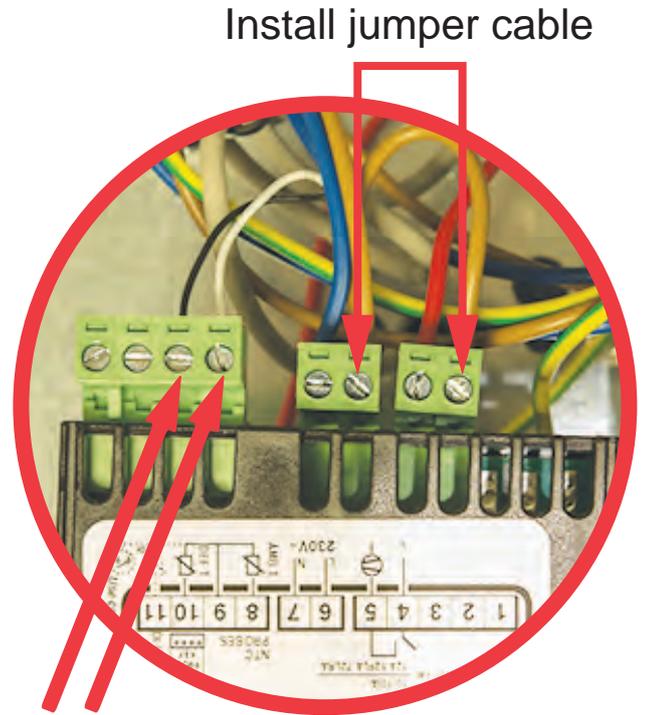

Install jumper cable

To here

Move the probe connector cables and install jumper cable according to picture.

